 


TURNING THE ENERGY SAVER FEATURE ON OR OFF

When to Use:

 
- This optional feature (with the appropriate hardware installed) provides a premises thermostat override. When you wish to have the Energy Saver override your regular thermostat setting at night or while you are away, toggle the Energy Saver feature on. The Energy Saver Module controls the temperature according to the low- and high-temperature limit settings you set in the system (see "Setting Energy Saver Temperatures").

What to Do:



- Don't change the setting of your regular thermostat. Leave it set to your normal comfort level.
- Press ***+CODE+5** from any TouchTone phone (off hook)

OR



- Press **CODE+5** or **COMMAND+5** on the Alphanumeric or Wireless Touchpad.

What Will Happen:

- You hear a single BEEP from the interior sirens after **5**.
- If you are operating the system from a telephone, you hear "Energy Saver is on/off."
- The Alphanumeric Touchpad displays ENERGY SAVER IS ON or ENERGY SAVER IS OFF.

Notes:

- The Energy Saver commands, discussed above, turn the feature on or off each time they are used. If you are in doubt as to the current off/on status of the Energy Saver, you may wish to use the full status command. Press ***+#+5** from any TouchTone phone to determine the status before proceeding.
- If you accidentally turn the feature on or off because you were not aware of its current status, enter the command again to change it to the other state.

Application Note:

 
- The following example illustrates how the Energy Saver feature might be used in the winter. When you leave for work, you can set the Energy Saver **on**, to override your normal premises temperature setting of 70° F to a new setting of 60° F. This will keep your premises at 60° F all day. Before leaving work, call the security system and turn the Energy Saver **off**. This returns the temperature in your premises to 70° F before you arrive.

SETTING ENERGY SAVER TEMPERATURES

When to Use:

- When you wish to change the high or low thermostat control temperature settings within a 45° F to 90° F range.

What to Do:



- To set the low-temperature limit:

Press ***+CODE+#+3** from any TouchTone phone

OR

Press **CODE+STATUS+3** on the Wireless Touchpad.

Immediately enter your desired 2-digit setting such as

5+5 for 55° F.

- To set the high-temperature limit:

Press ***+CODE+#+4** from any TouchTone phone

OR

Press **CODE+STATUS+4** on the Wireless Touchpad.

Immediately enter your desired 2-digit setting such as

9+0 for 90° F.

- On the Alphanumeric Touchpad, press **CODE+STATUS+3**, the display shows LOW TEMP __ then flashes and displays Low Temp (new temp). When set, the display reads LOW TEMP OK. The same holds true for high-temperature setting. Set it in the same way with the command **CODE+STATUS+4**.

What Will Happen:

- Interior sirens beep and the telephone announces "Energy Saver low (high) temperature is xx degrees."

Notes:

- The minimum low limit is 40° F and the maximum high limit is 90° F.
- The factory settings are 90° F high and 50° F low.
- DO NOT set high and low temperatures closer than 14° F, such as 68° F (low) to 72° F (high).

In addition to temperature control, the Energy Saver has a built-in freeze detector. A Freeze Alarm report is sent to the monitoring service if the temperature falls below 42° F in the area where the Energy Saver is mounted. Your security consultant can adjust this temperature if you wish.